1

14x 1x 1x 1x 1x 1x 2x 1x 1x 2x 1x

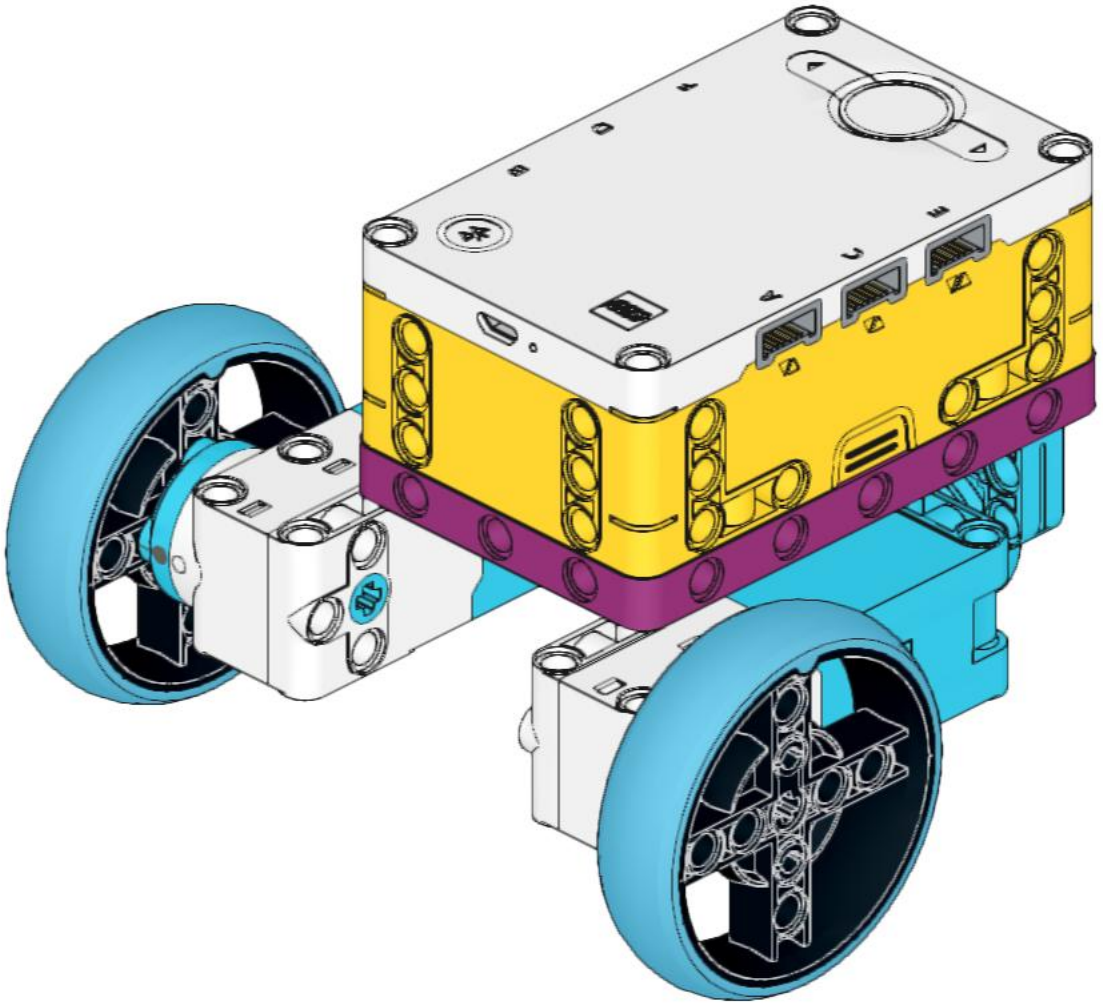

BRICKULUM

2

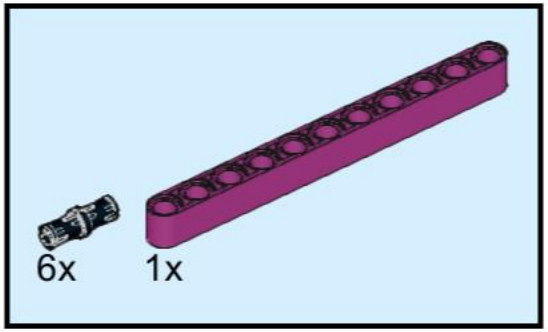

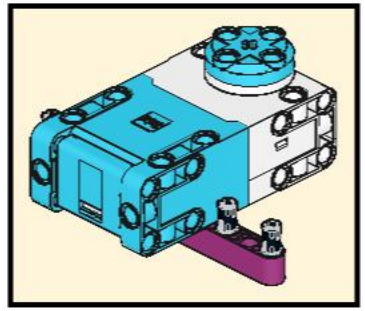

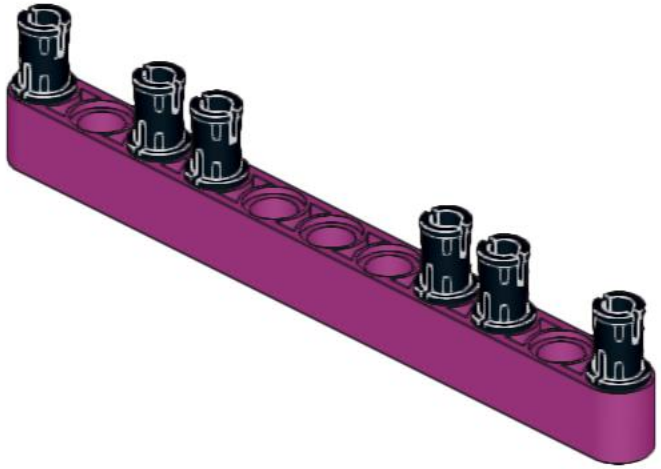

BRICKULUM

3

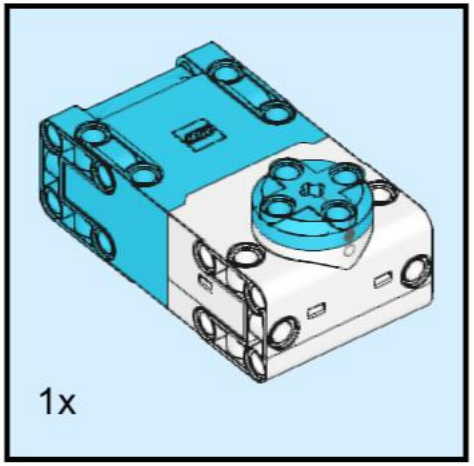

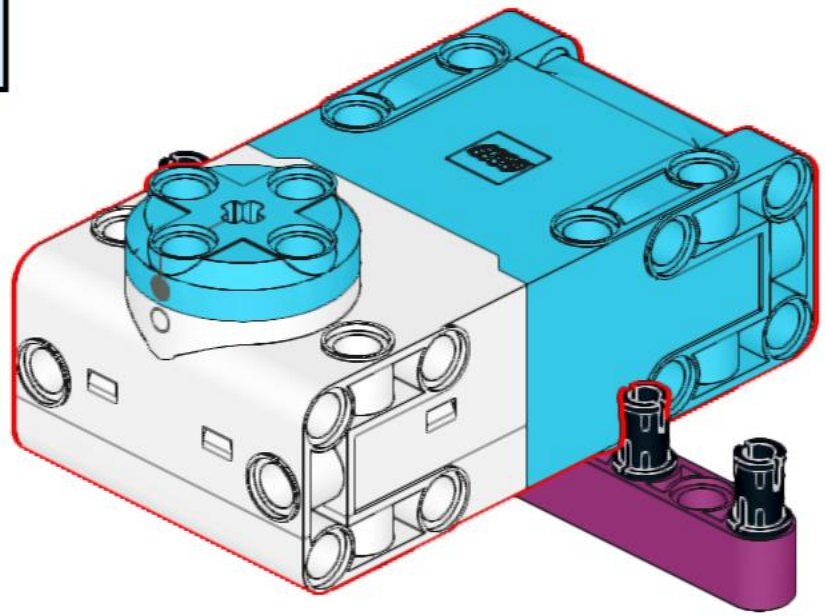

BRICKULUM

4

Check that all the holes line up.
Plug the cable into port C.

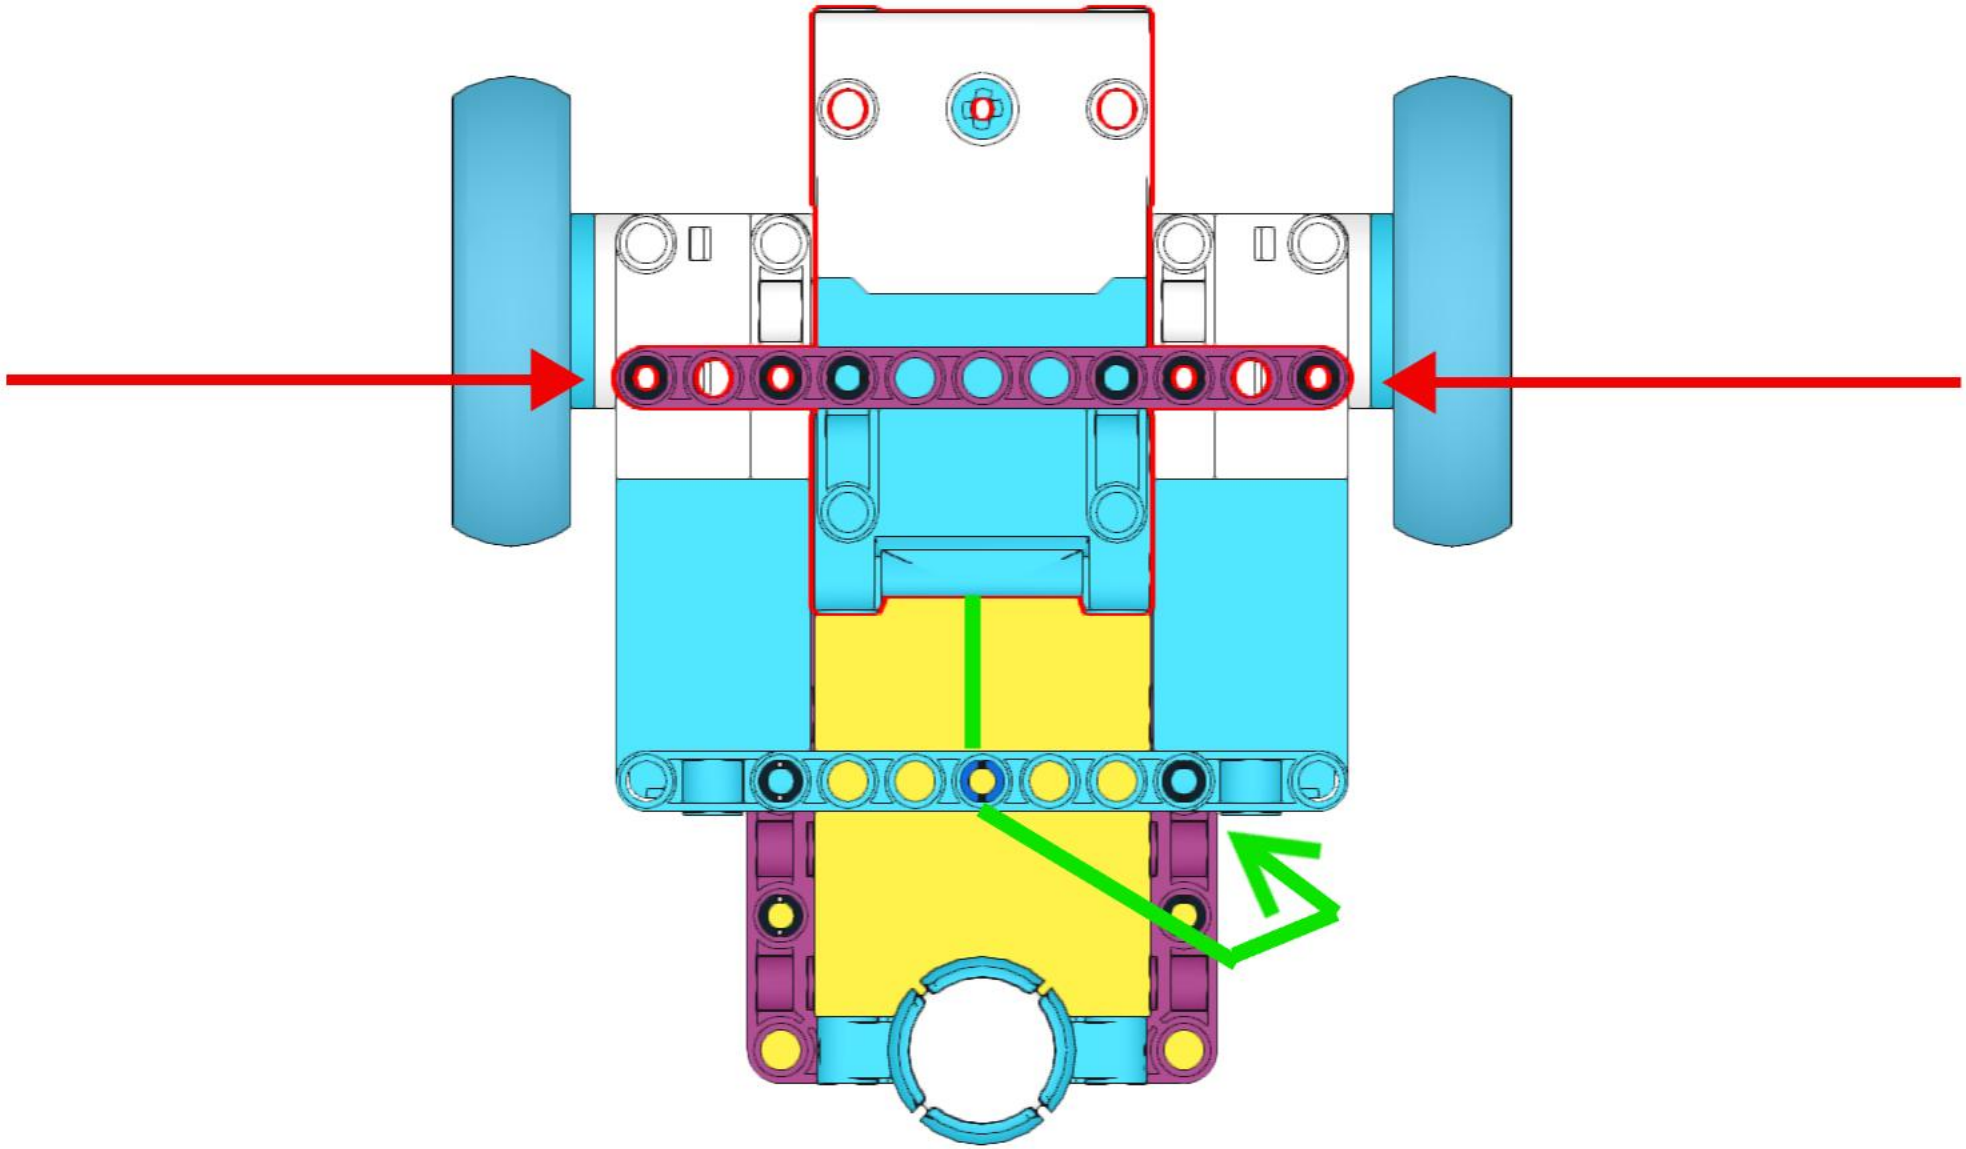

BRICKULUM

5

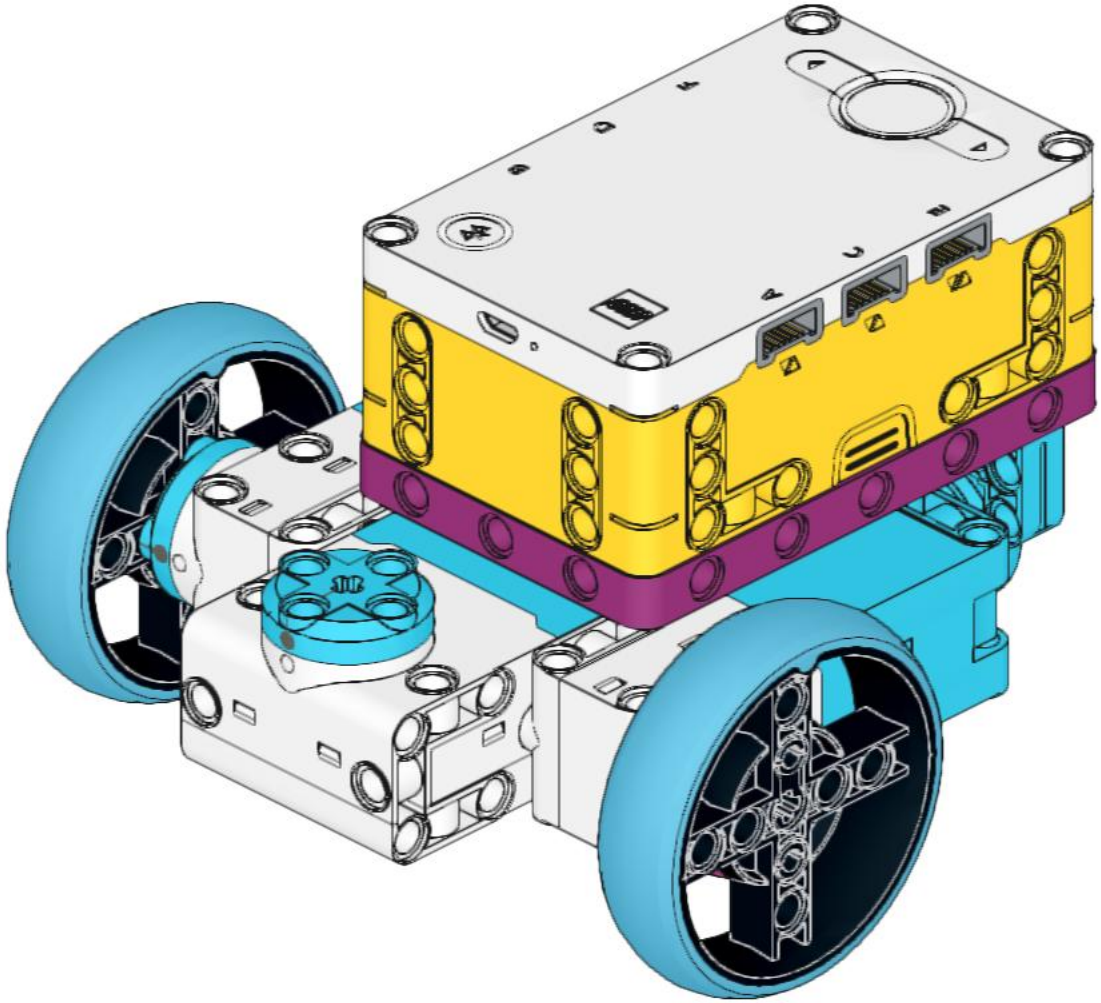

BRICKULUM

6

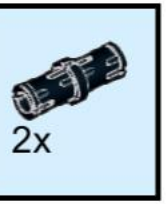

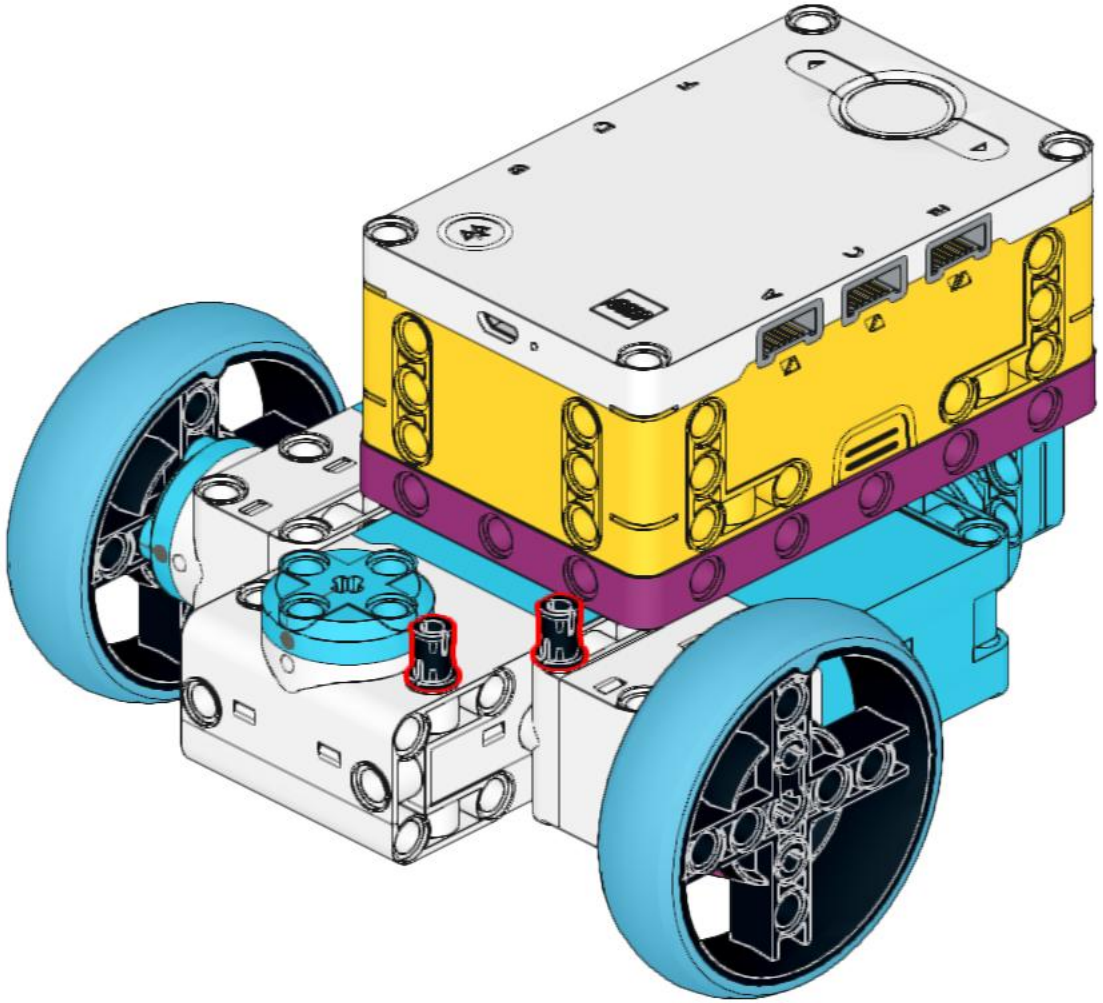

BRICKULUM

7

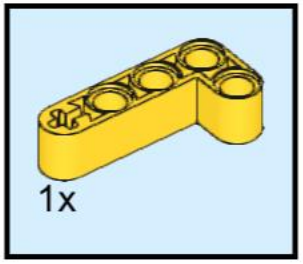

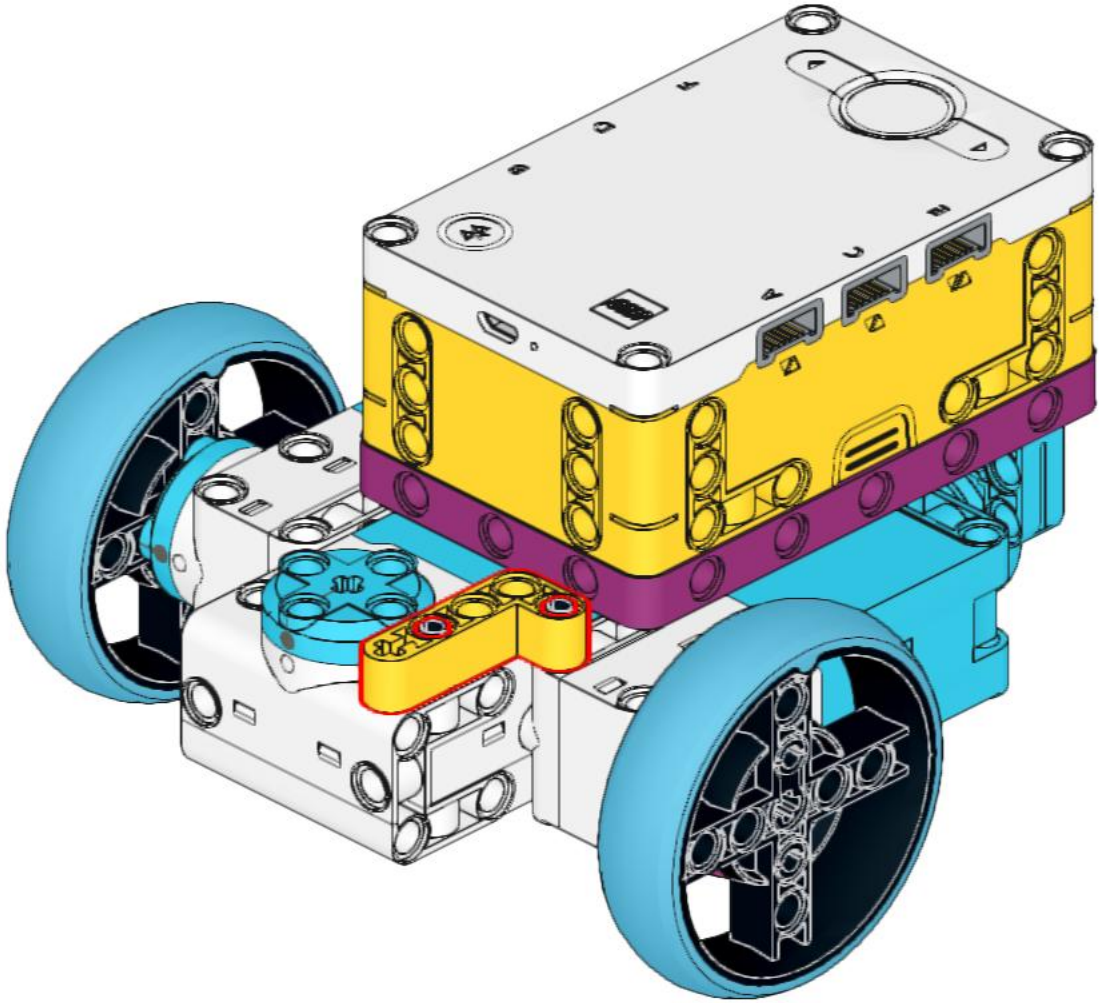

BRICKULUM

8

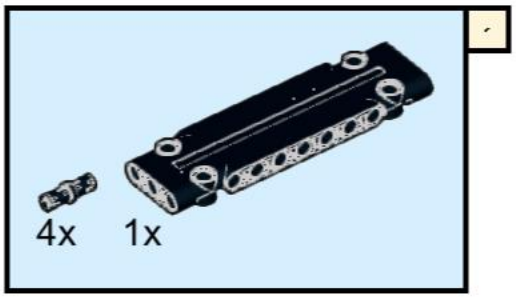

9

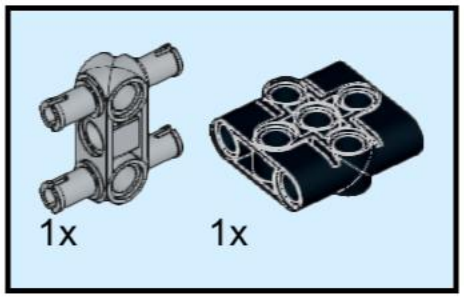

10

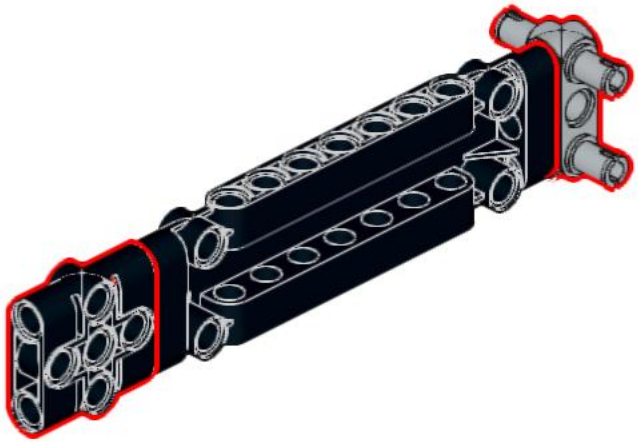

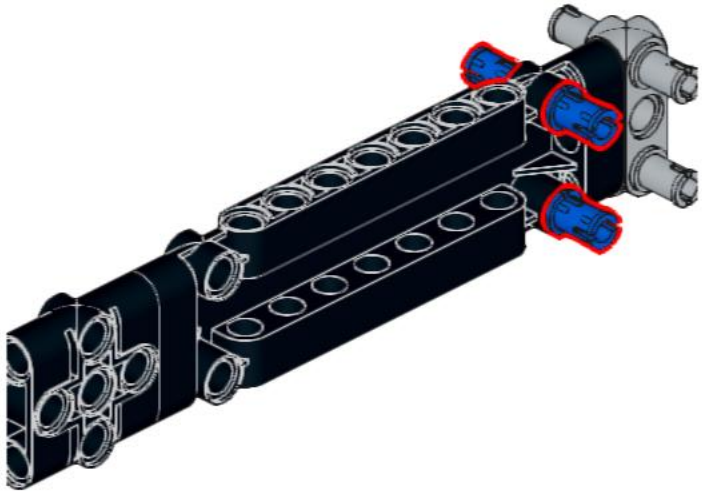

BRICKULUM

11

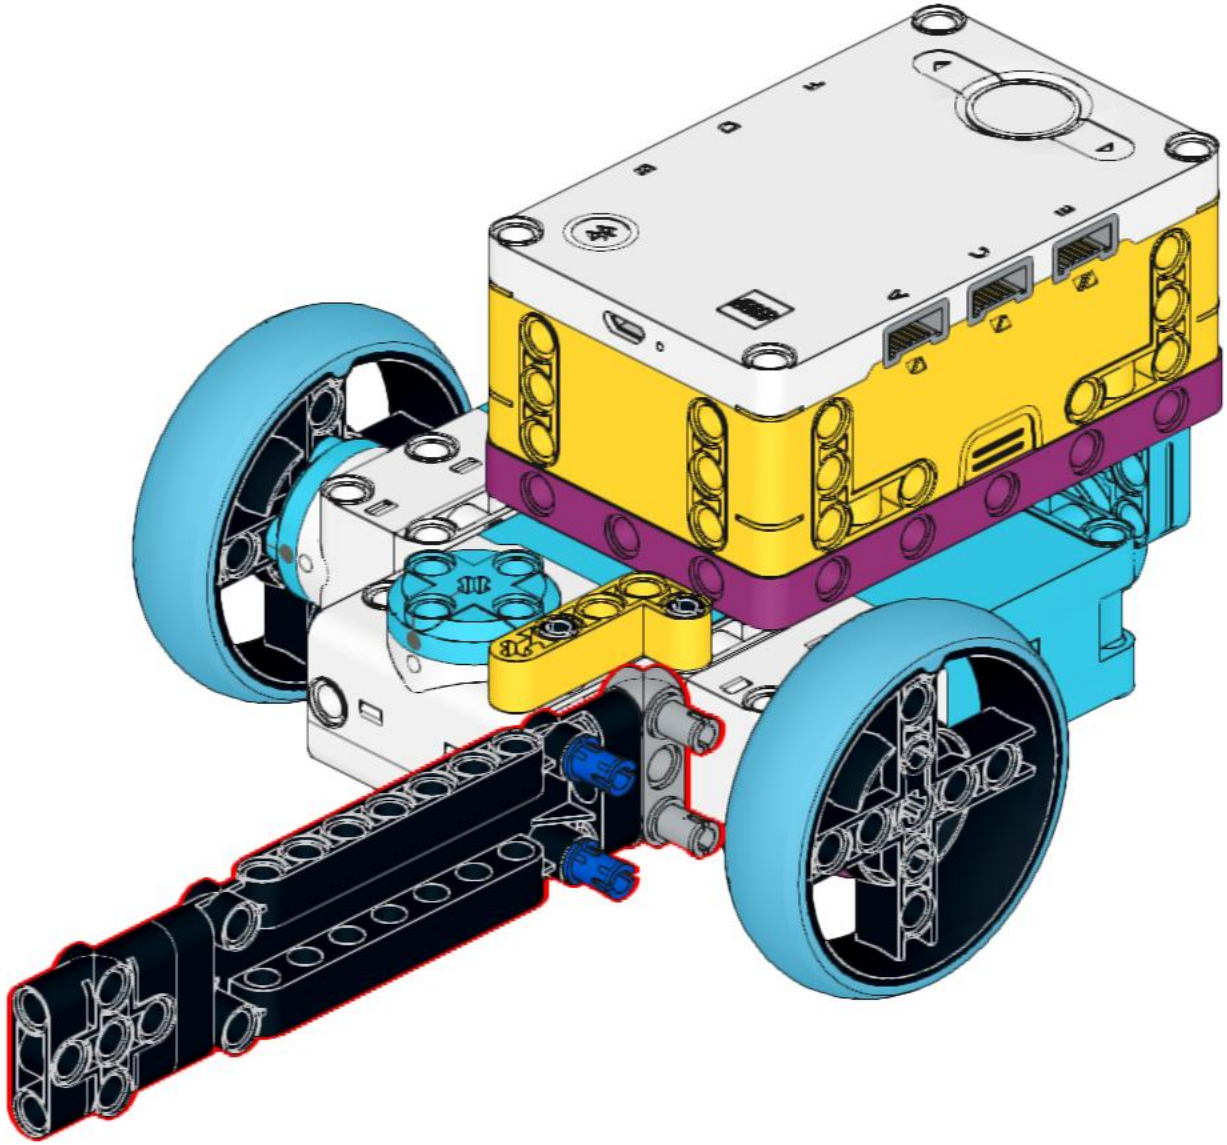

BRICKULUM

12

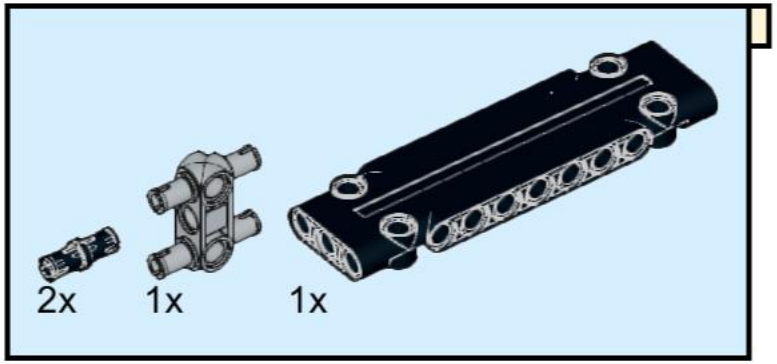

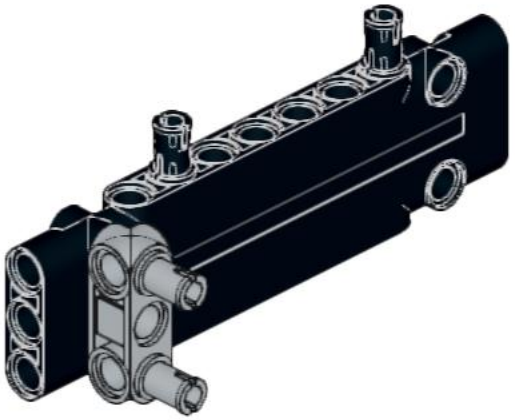

13

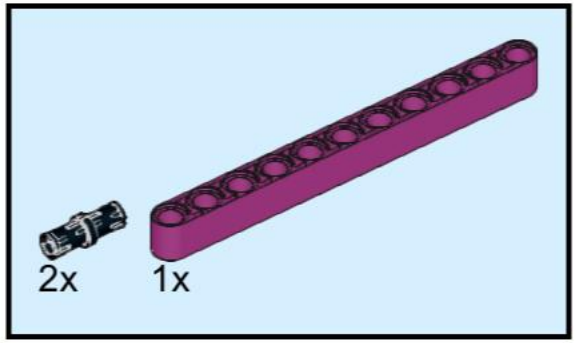

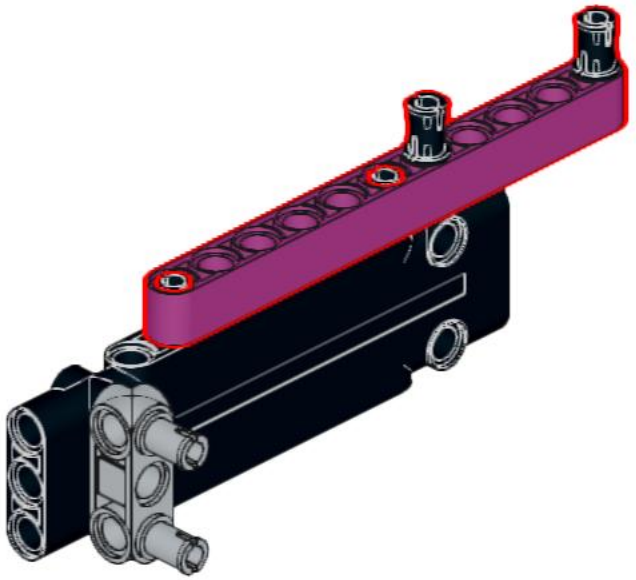

BRICKULUM

14

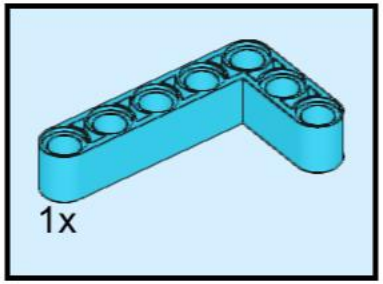

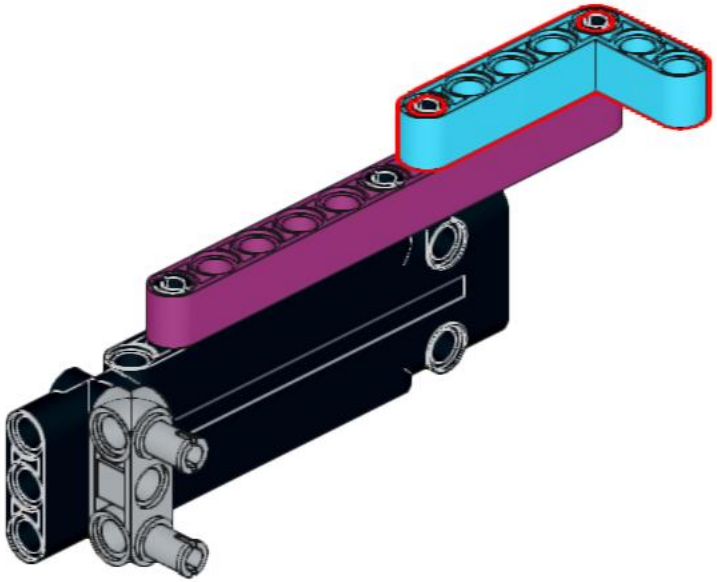

15

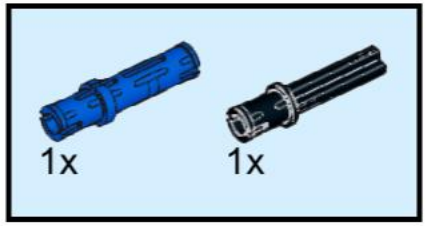

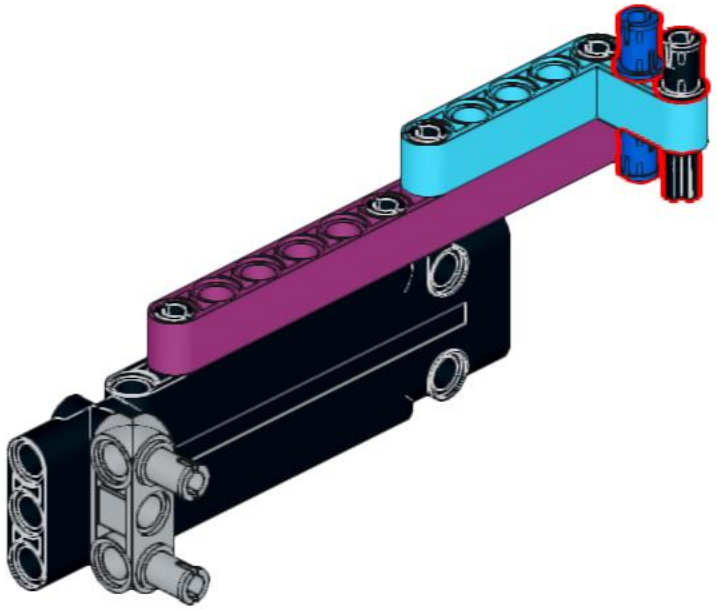

BRICKULUM

16

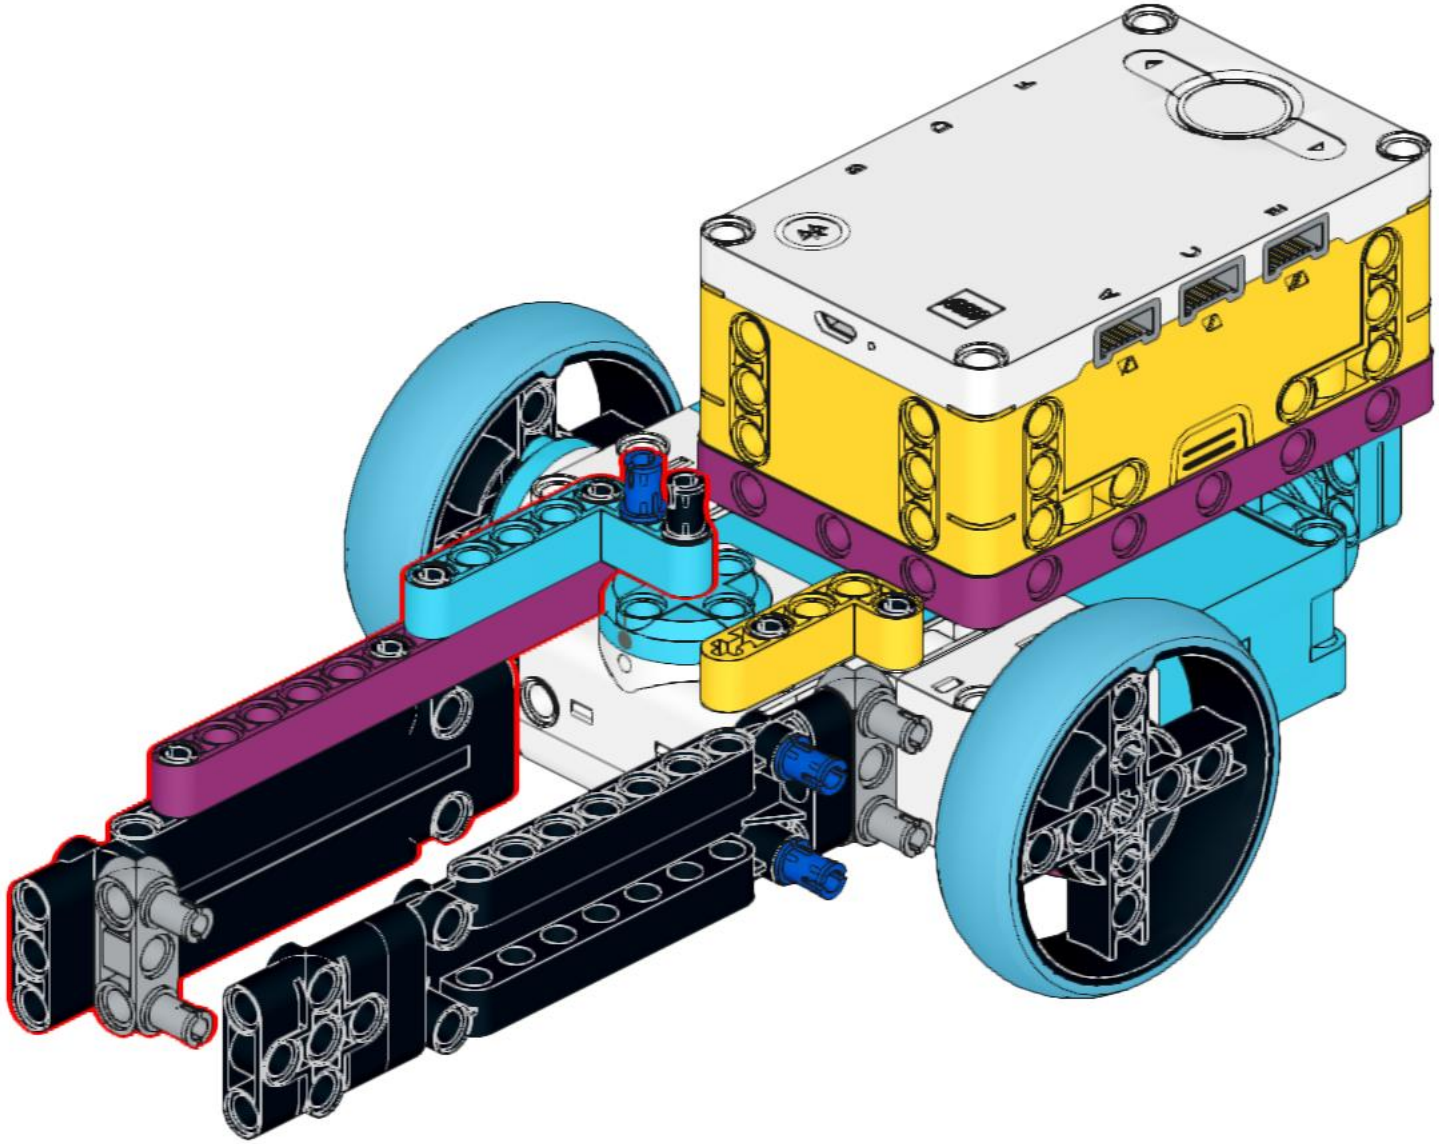

BRICKULUM

17

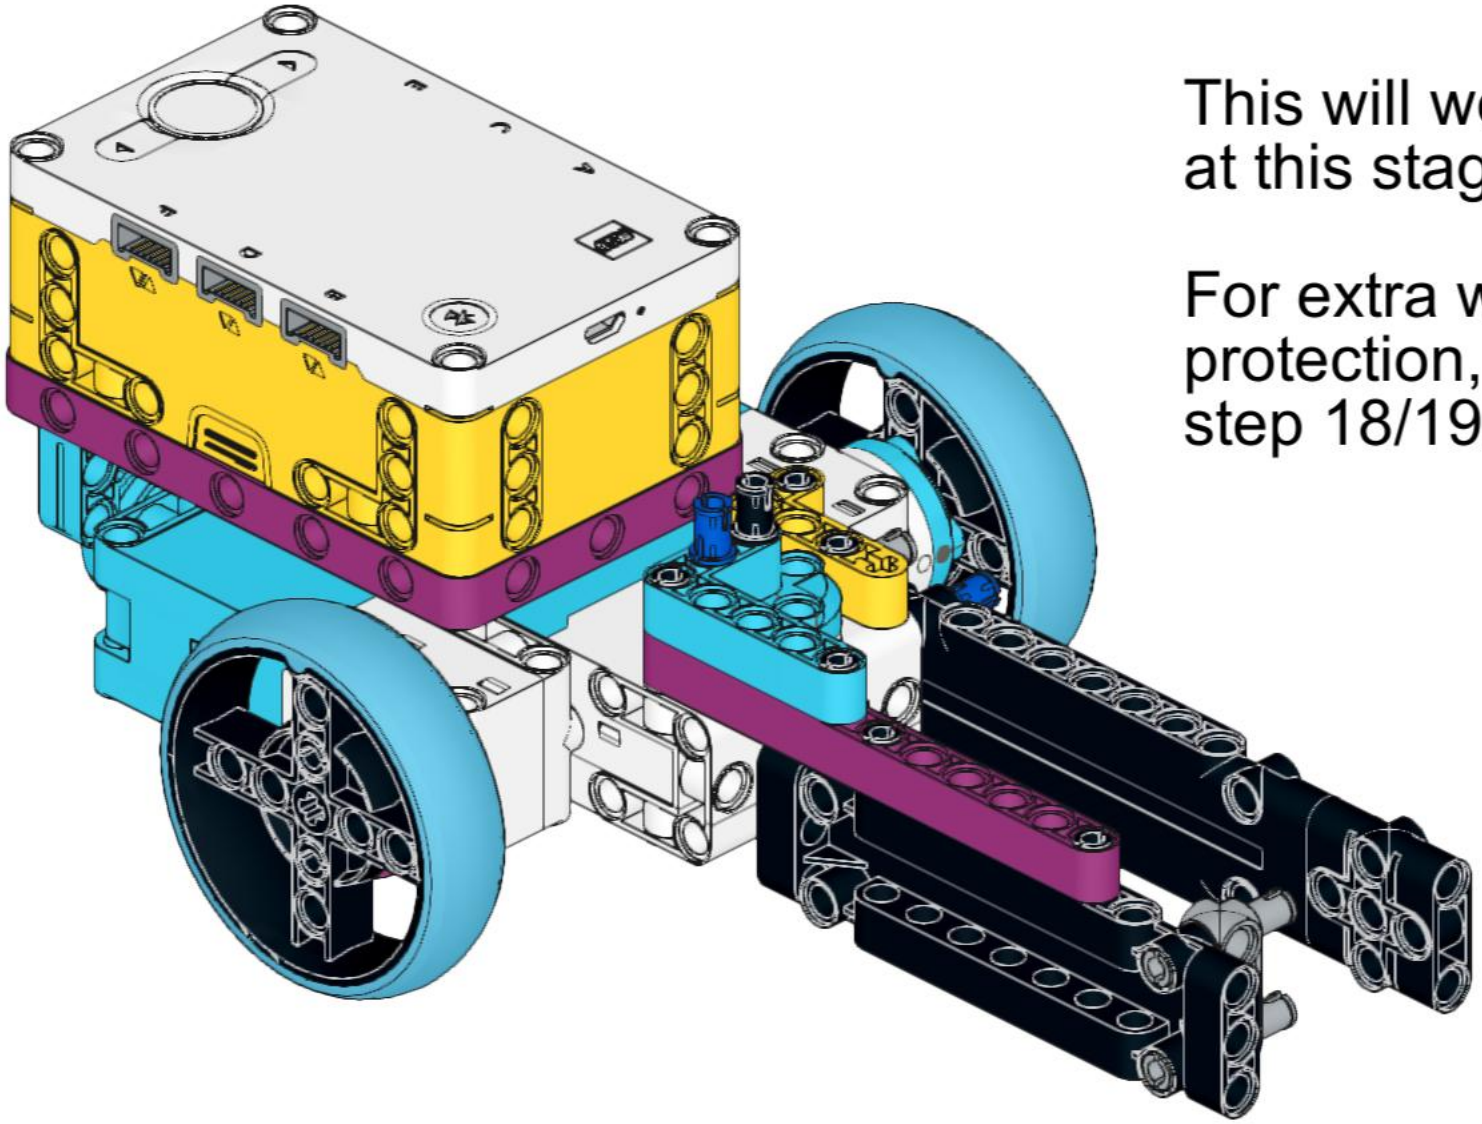

This will work well at this stage.

For extra wheel protection, add step 18/19.

BRICKULUM

18

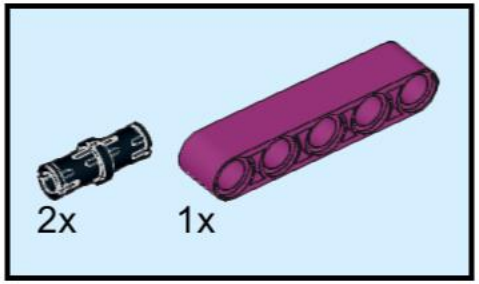

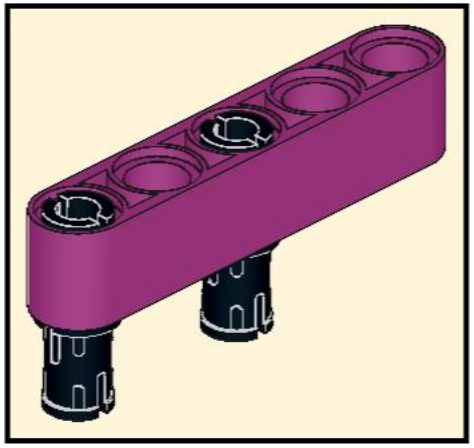

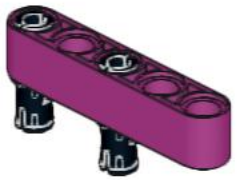

BRICKULUM

19

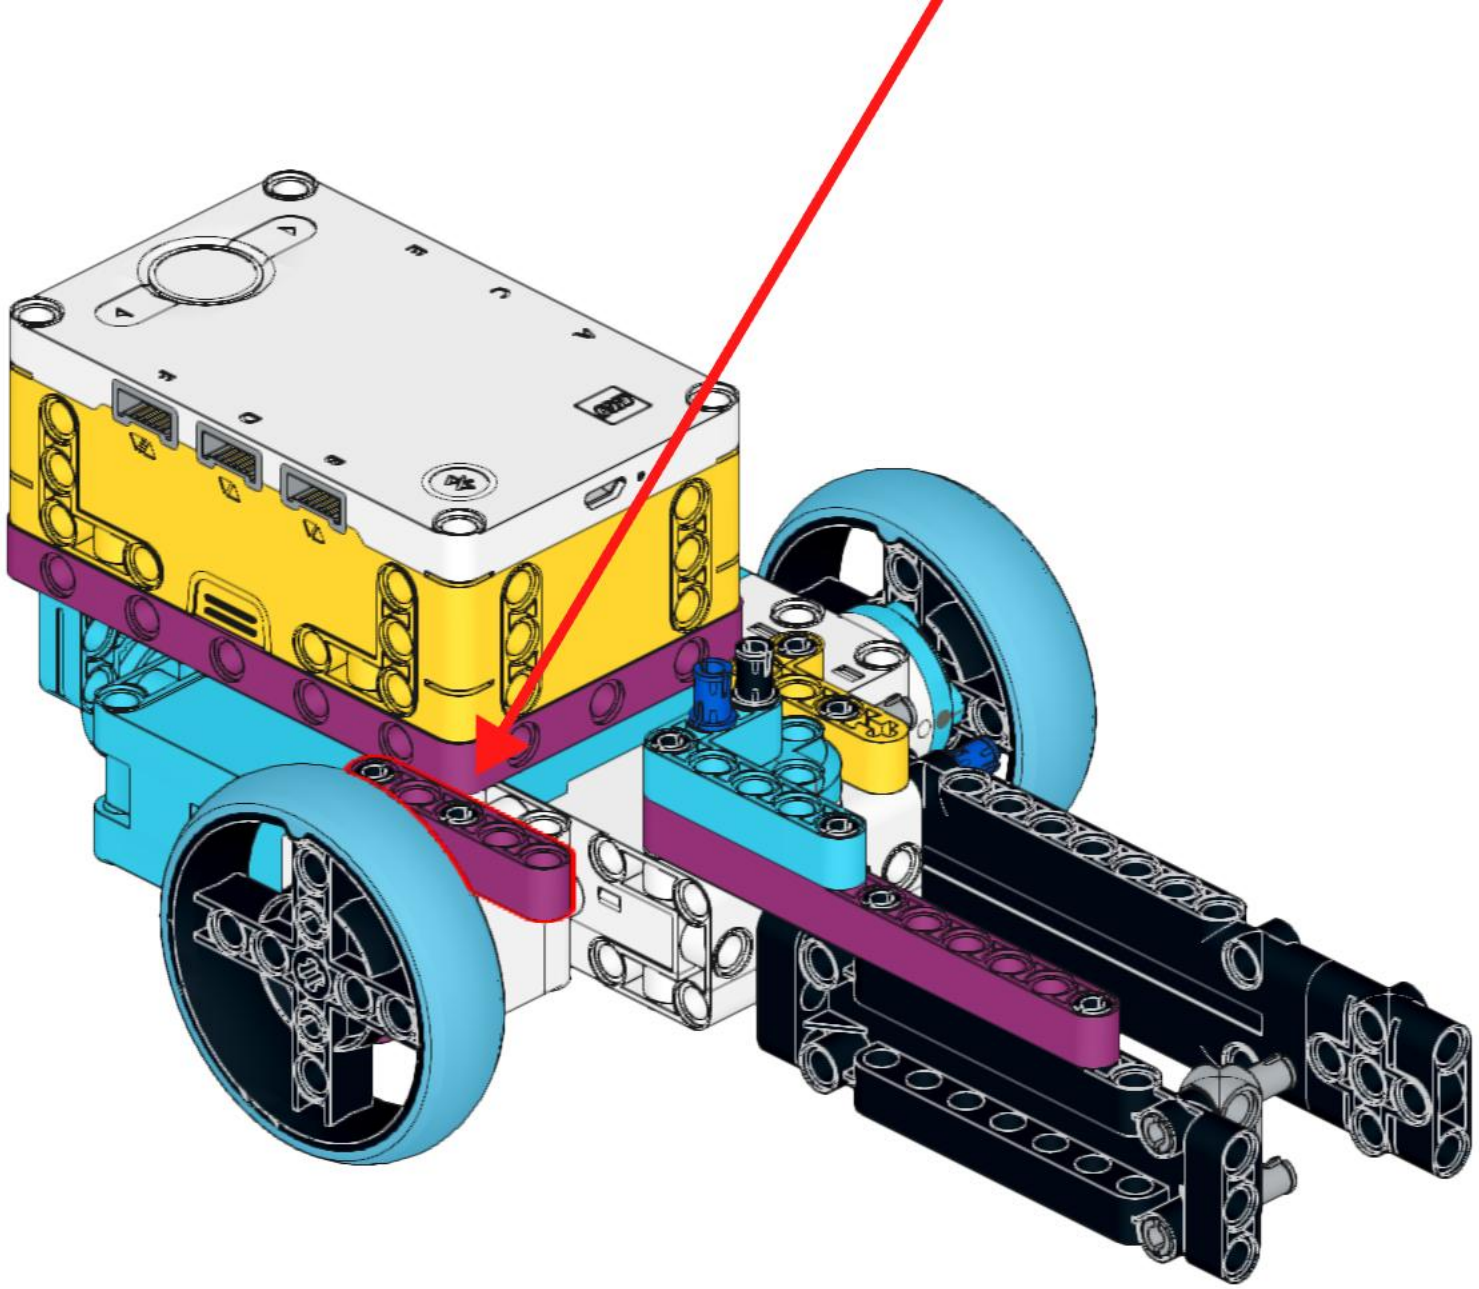

BRICKULUM